



# The views displayed on the Cind screen

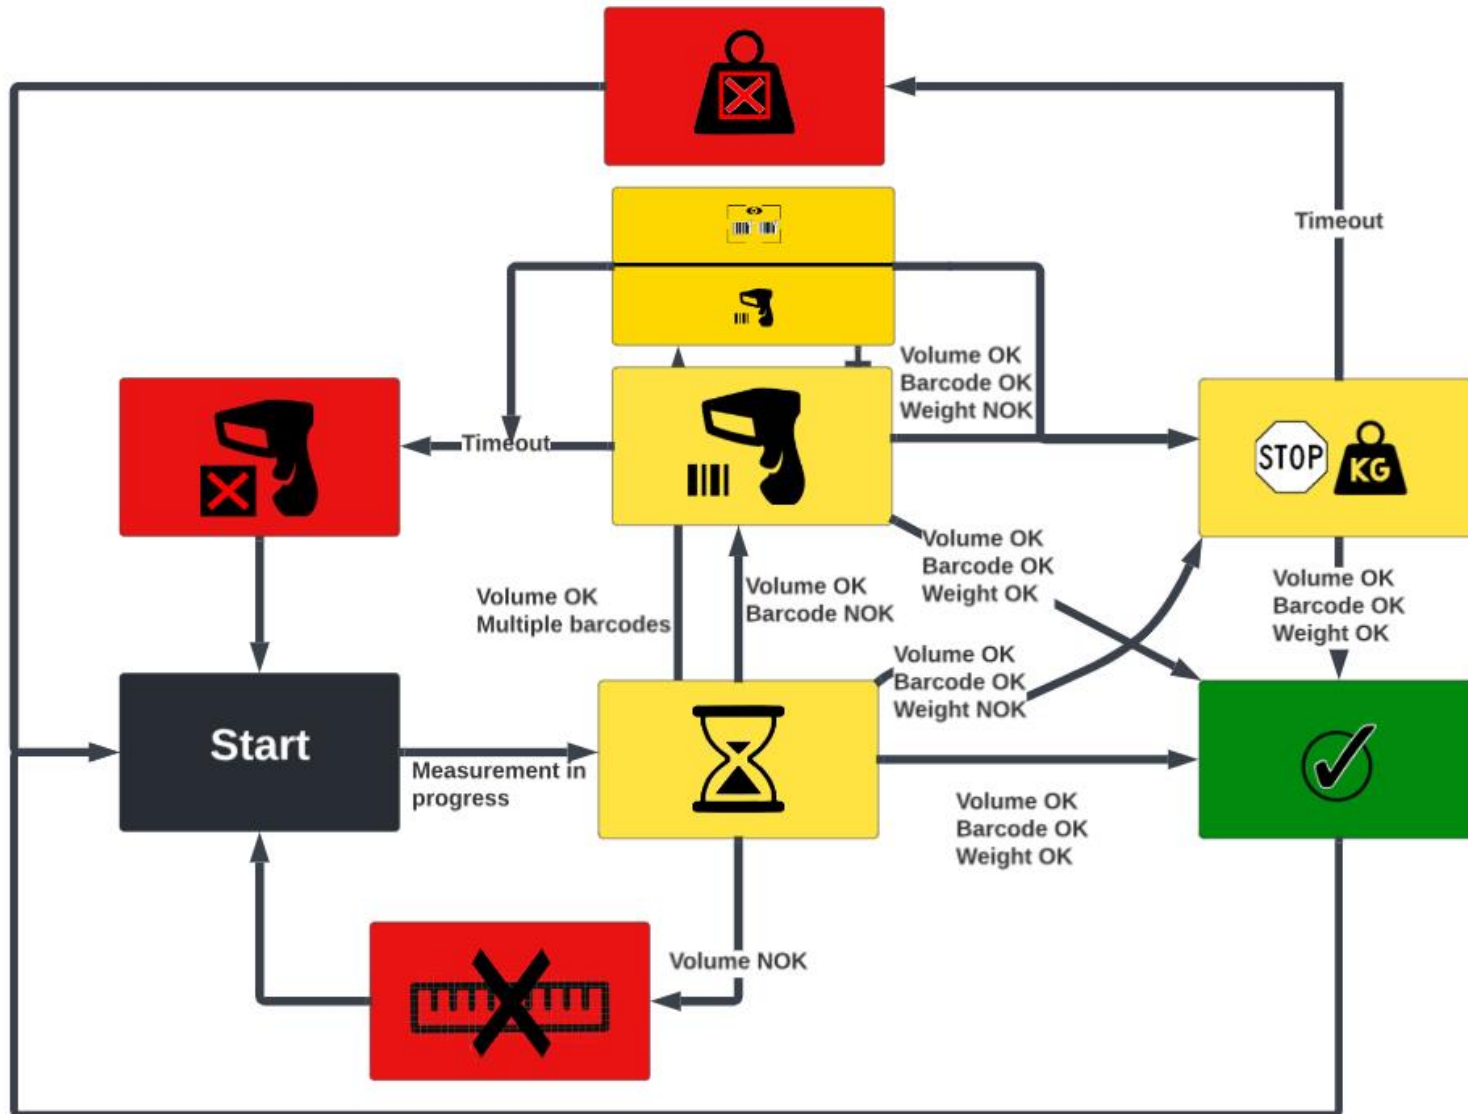

# CargoServer UI

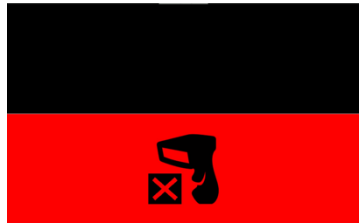

Barcode-timeout



Invalid-passage



Measuring




No-barcode detected /  
Manual scanning




No-weight-detected



OK

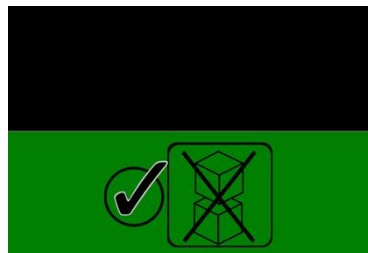


OK Non-stackable

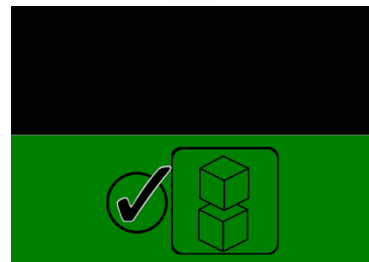

OK Stackable



Weight timeout

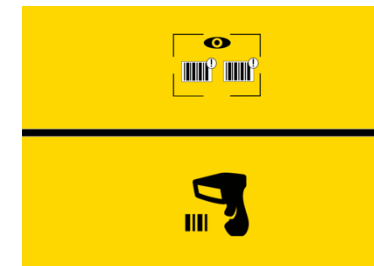

Multi-match\_manual  
scanning



Forklift registration failed



Forklift registration successful




Unregistered forklift




Failed to detect ArUco on forklift




Measurement failed

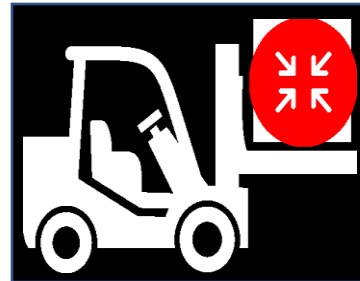

Cargo under minimum dimensions

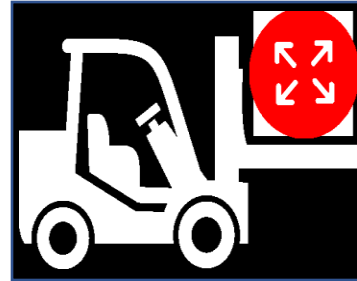

Cargo over maximum dimensions

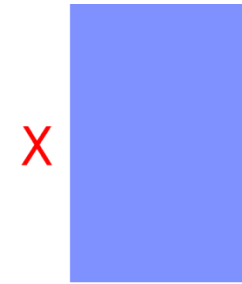

Outside of measurement zone



Forklift driving too fast



Forklift driving too slow



Forklift speed too varied



Forklift not driving straight